 
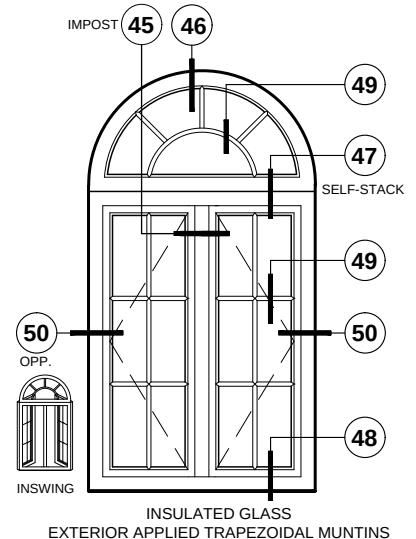 
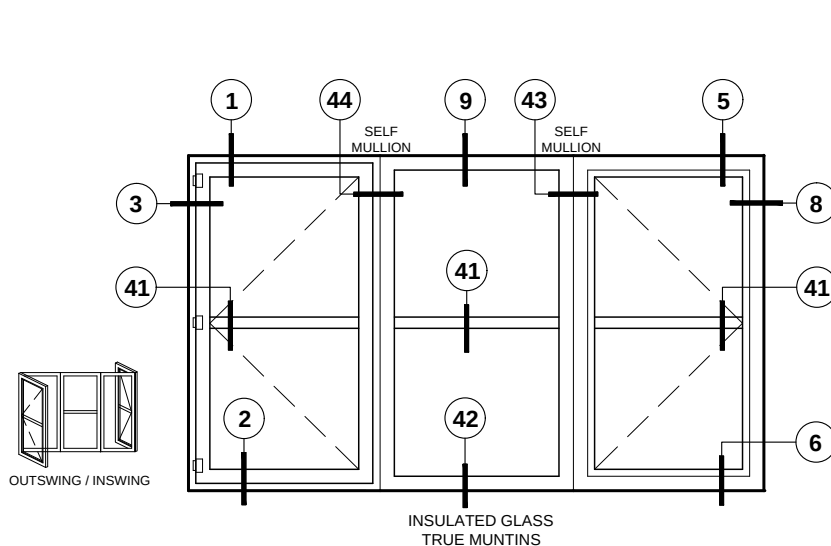 
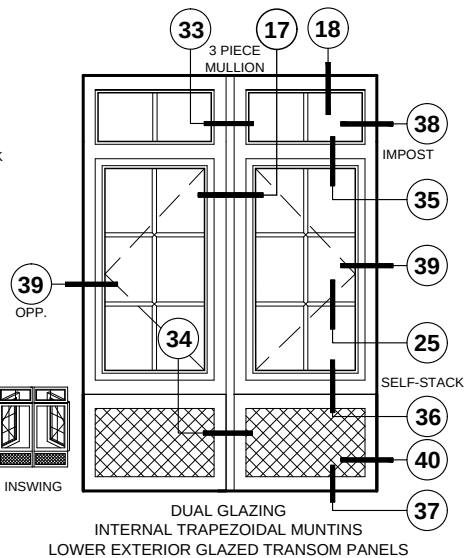 
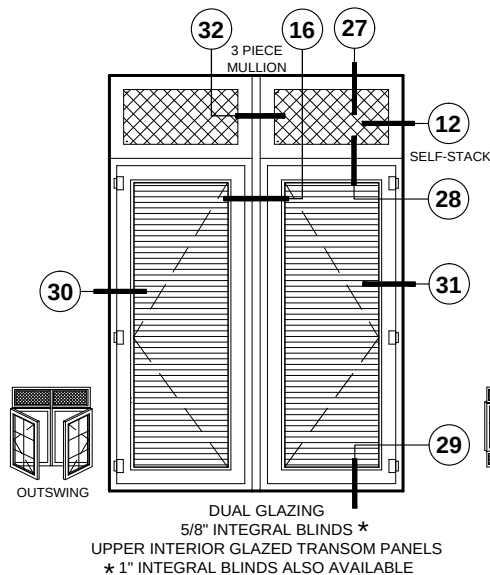 
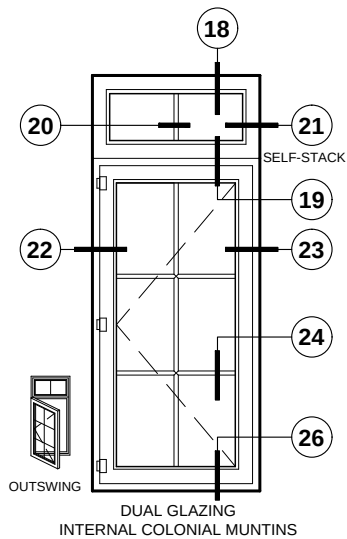 
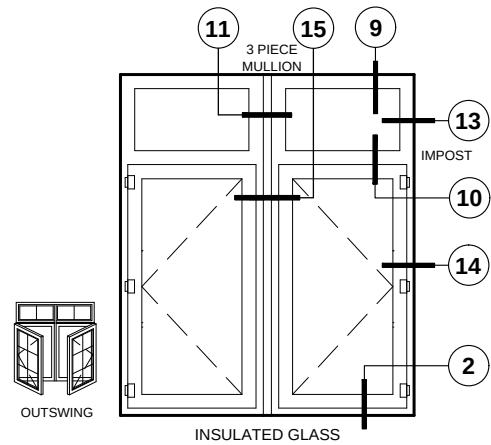 
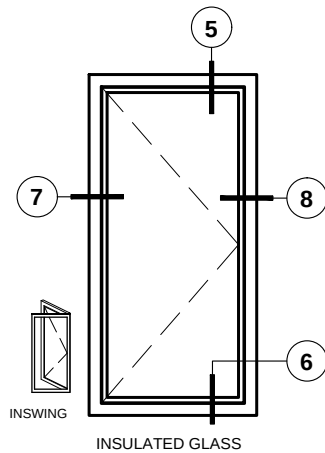 



Details shown reflect the most commonly used configurations.
Contact AWM for additional details and/or assistance.

02/01/19

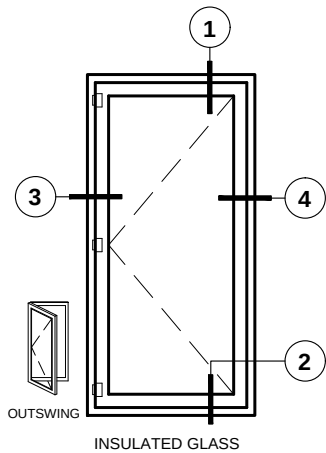





Details shown reflect the most commonly used configurations.
Contact AWM for additional details and/or assistance.

 02/01/19

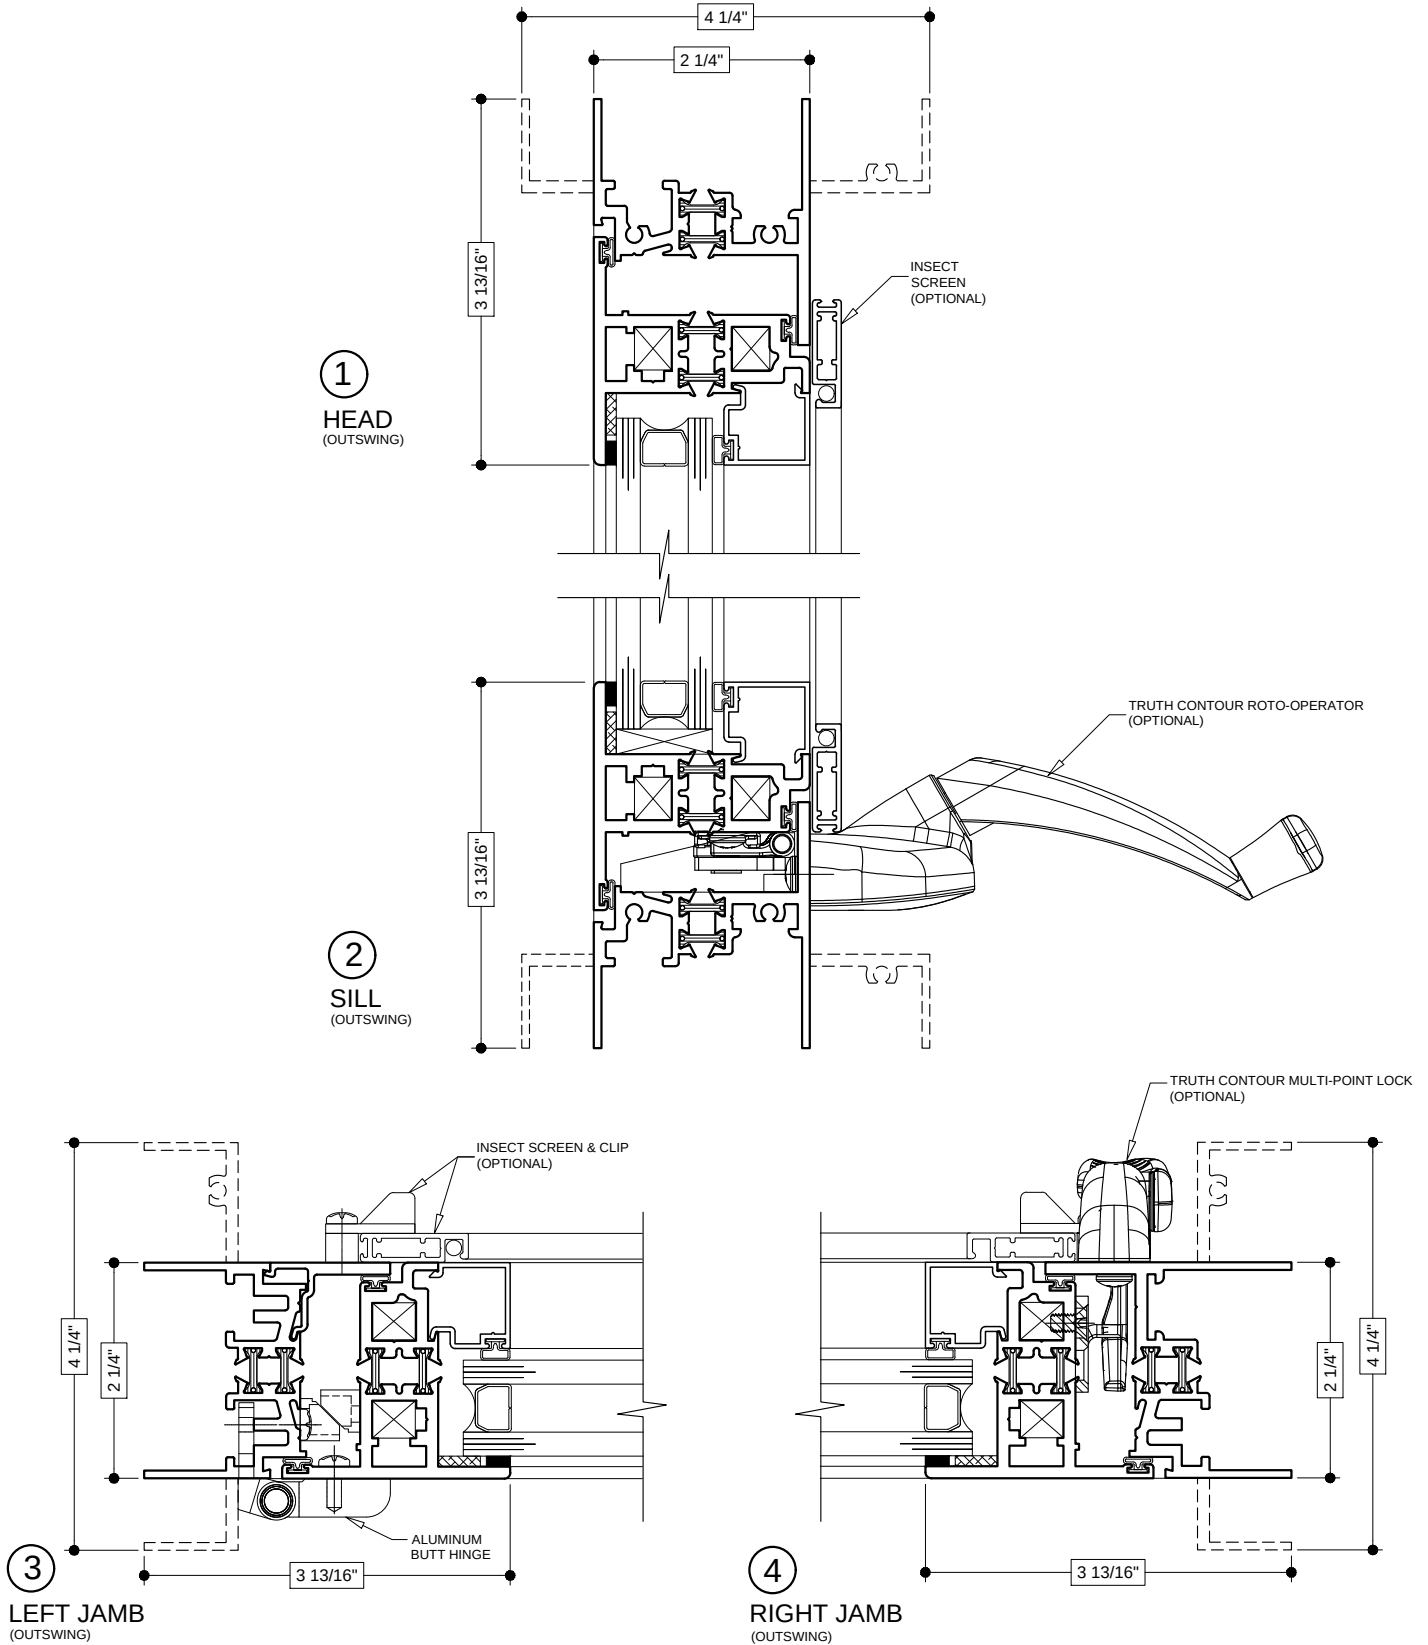

Details shown reflect the most commonly used configurations.
Contact AWM for additional details and/or assistance.

    
02/01/19

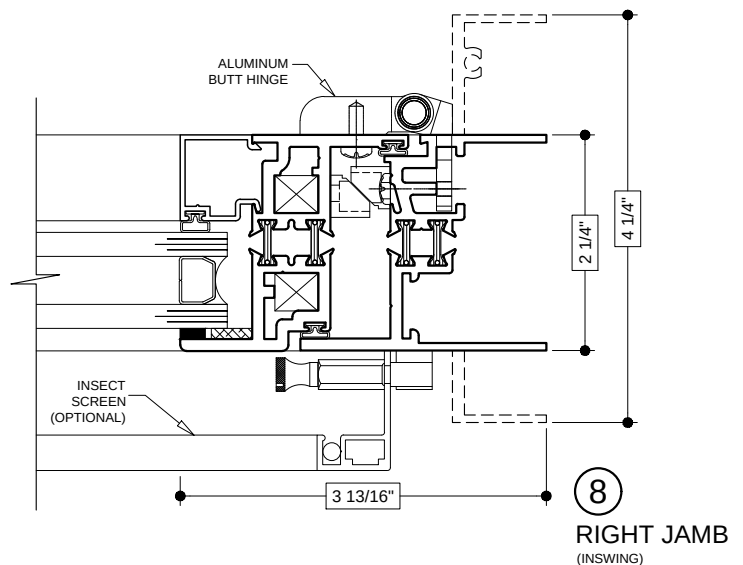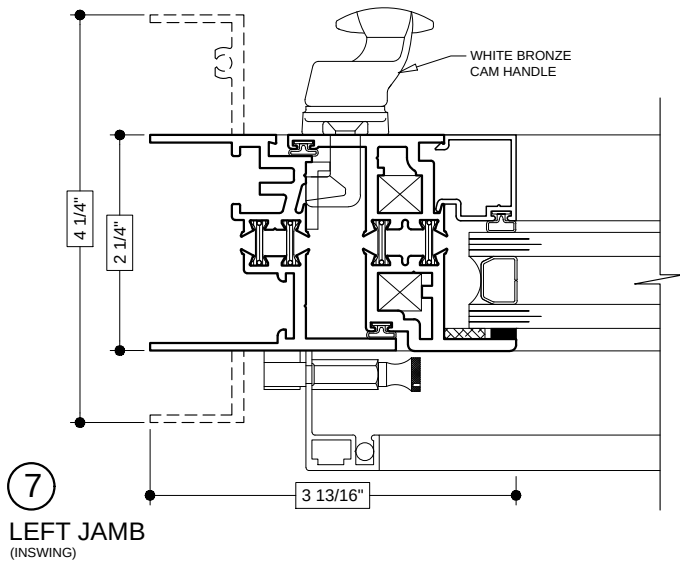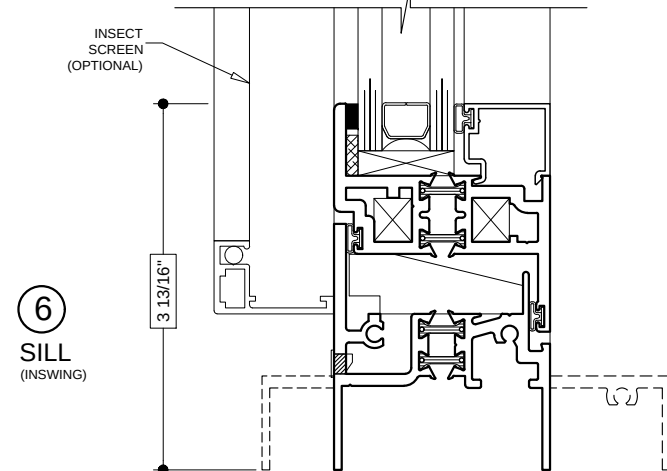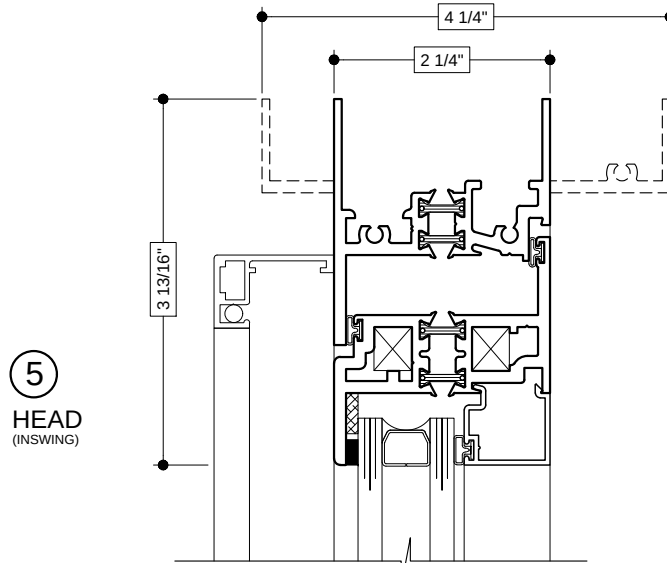


Details shown reflect the most commonly used configurations.
Contact AWM for additional details and/or assistance.

02/01/19

 
9
HEAD
(FIXED)

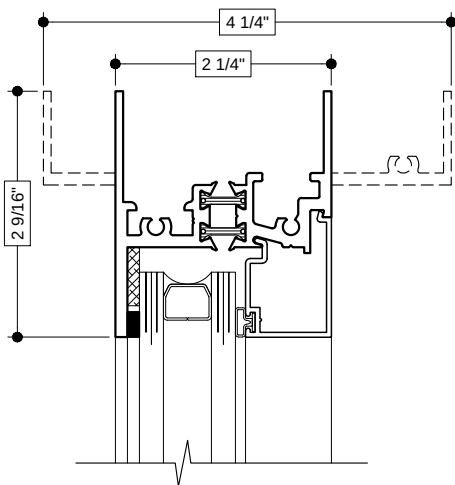


12
RIGHT JAMB
(FIXED PANEL)

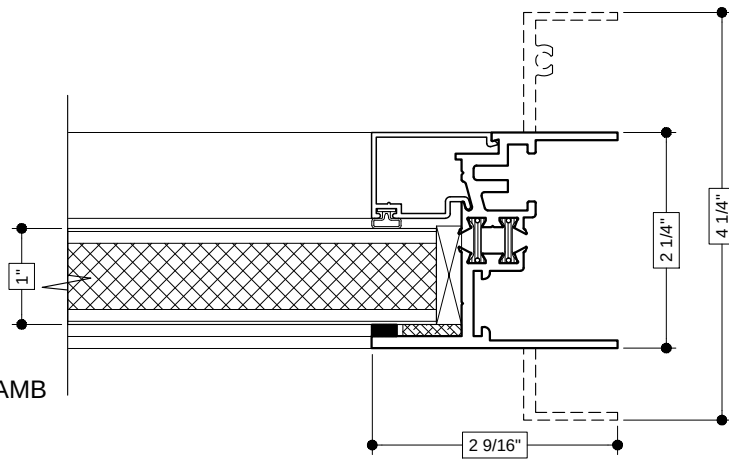 


13
RIGHT JAMB
(FIXED)

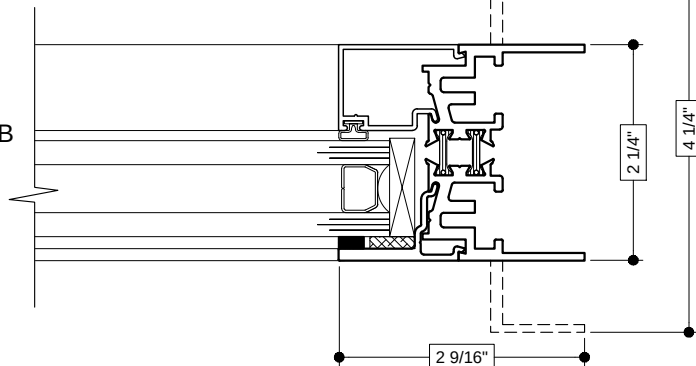 


10
IMPOST
(FIXED OVER OUTSWING)

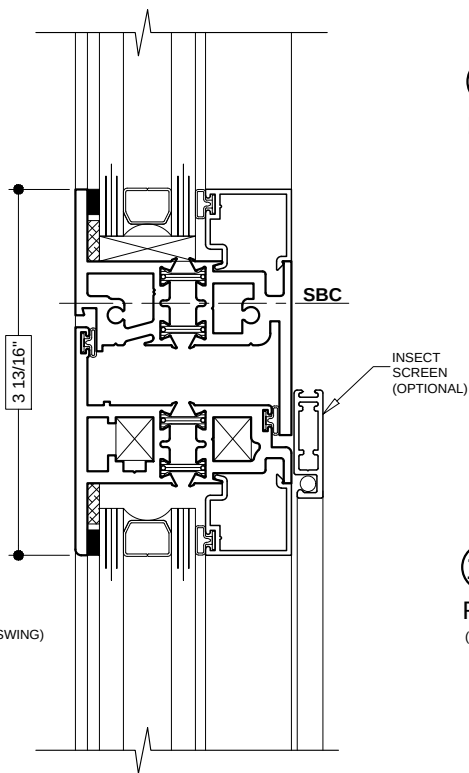 

14
RIGHT JAMB
(OUTSWING)

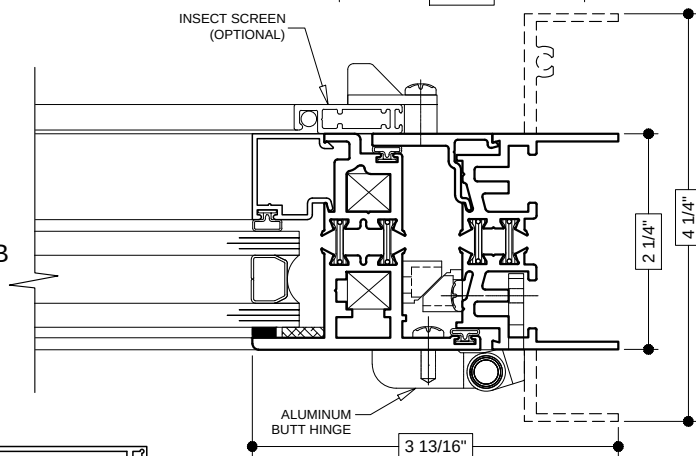 

11
3-PIECE MULLION
(FIXED TO FIXED)



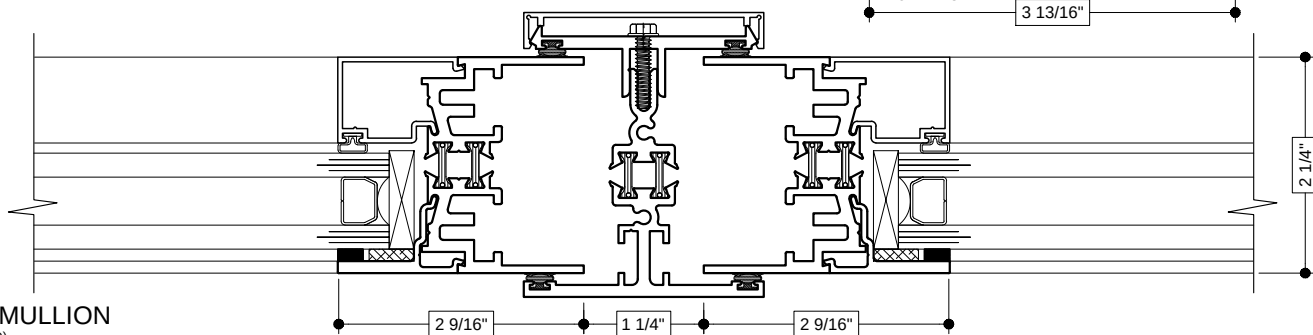 


HALF SCALE DETAILS

PAGE 4 OF 12

Details shown reflect the most commonly used configurations.
Contact AWM for additional details and/or assistance.

   
02/01/19

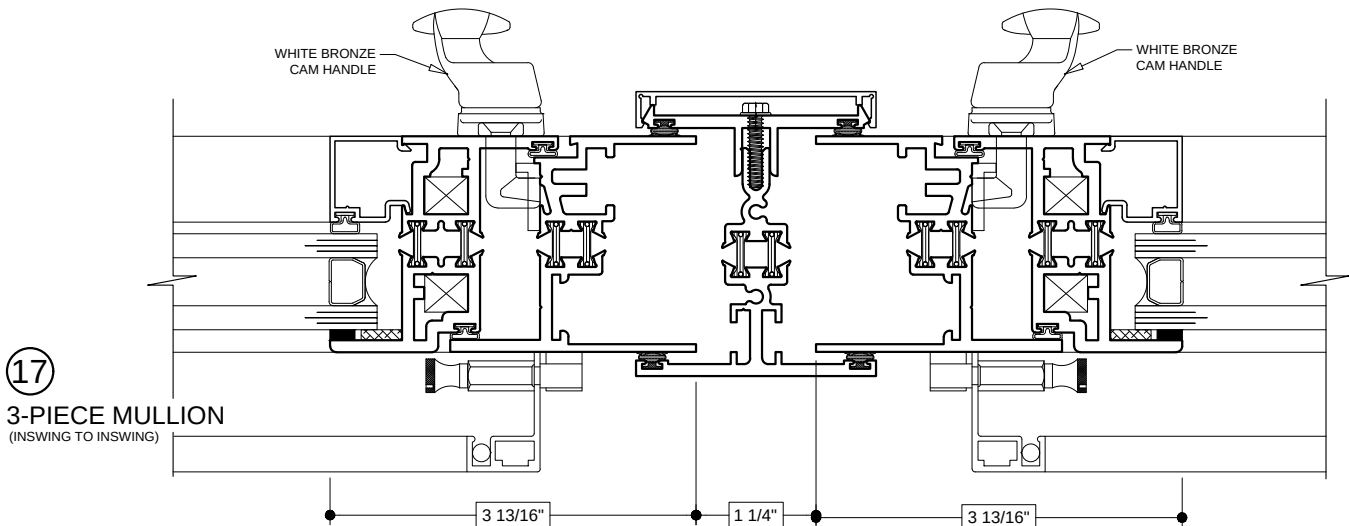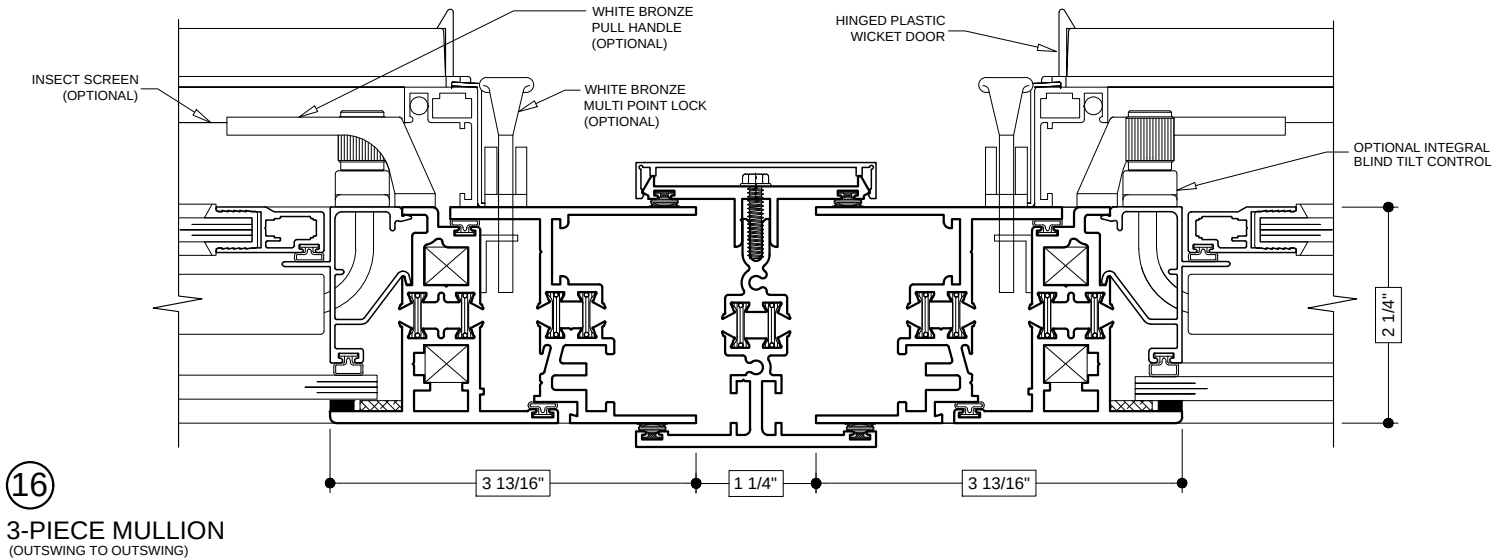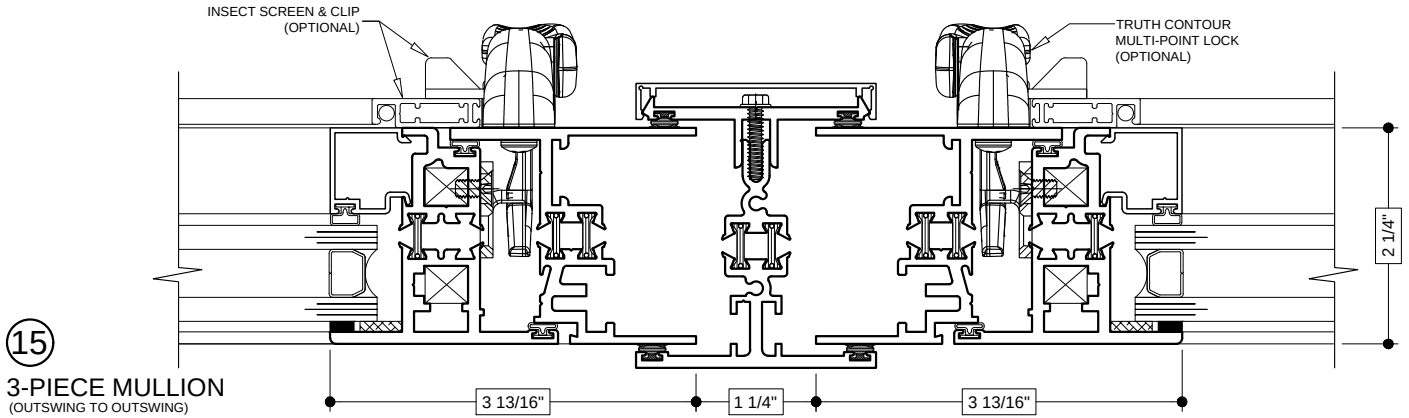


Details shown reflect the most commonly used configurations.
Contact AWM for additional details and/or assistance.

02/01/19

 
18
HEAD
(FIXED)

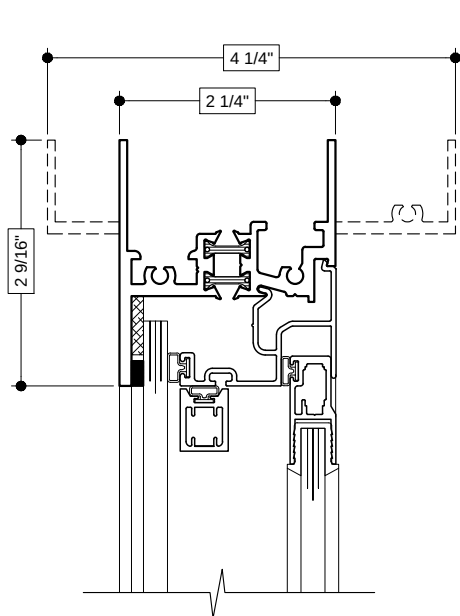


20
APPLIED MUNTIN
(COLONIAL)

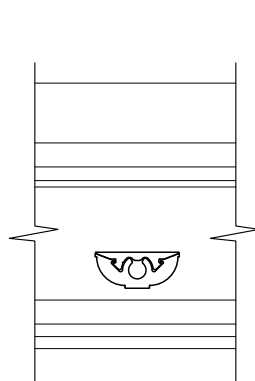 


21
RIGHT JAMB
(FIXED)

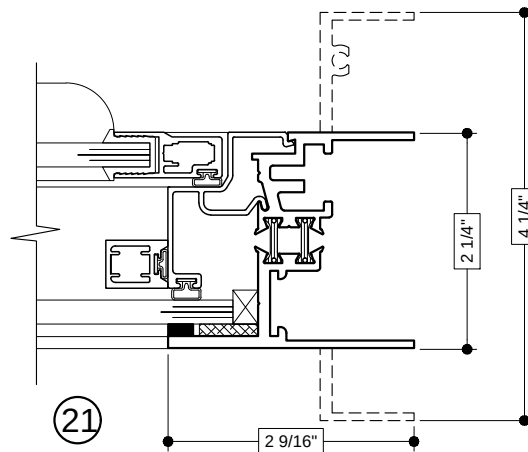 


19
SELF-STACK
(FIXED OVER OUTSWING)

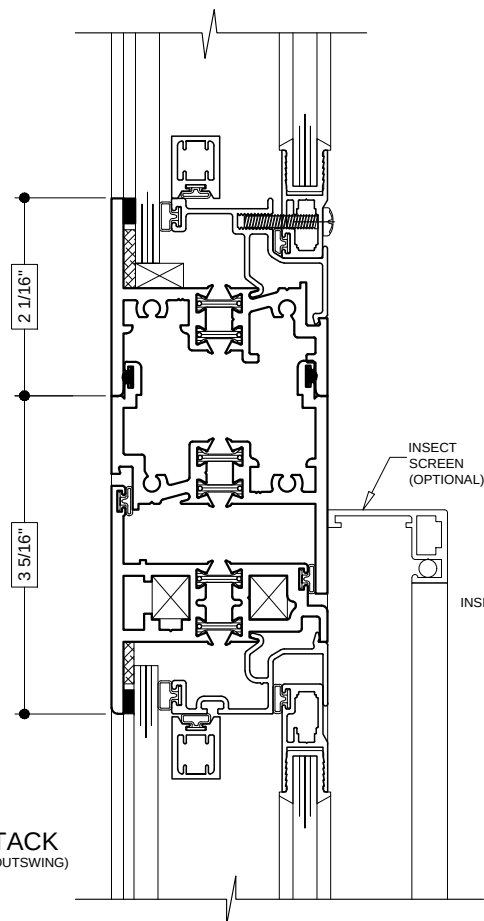 

22
RIGHT JAMB
(OUTSWING)

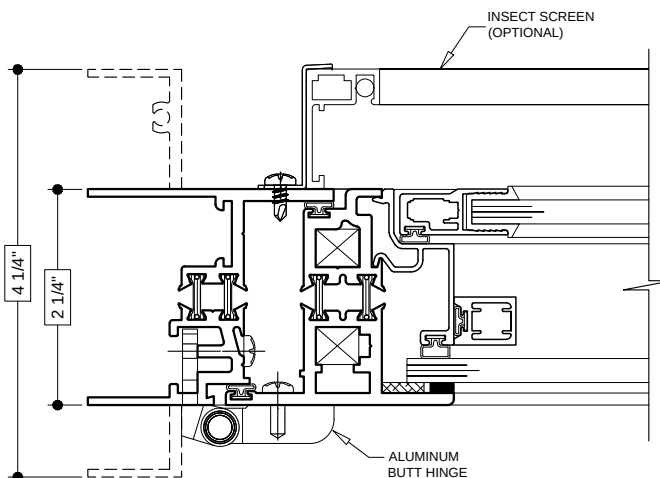 


23
LEFT JAMB
(OUTSWING)

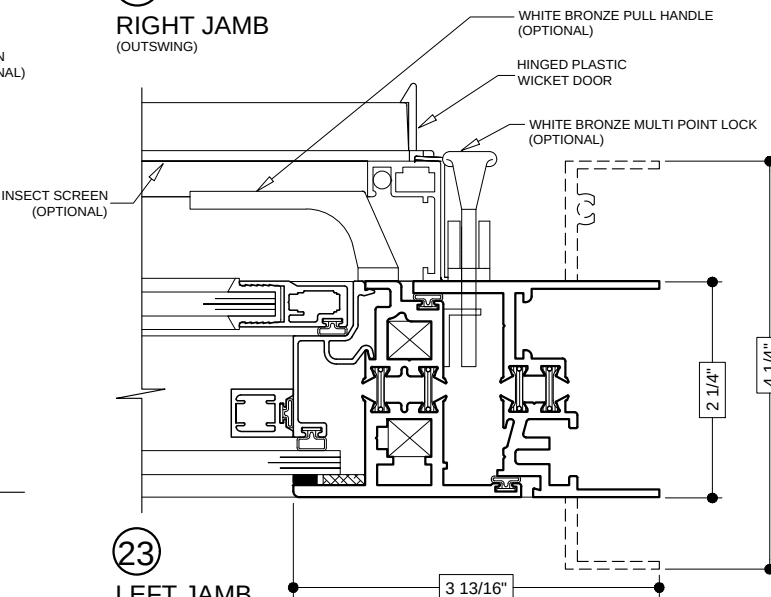 


Details shown reflect the most commonly used configurations.
Contact AWM for additional details and/or assistance.

02/01/19

 
24
APPLIED MUNTIN
(COLONIAL)

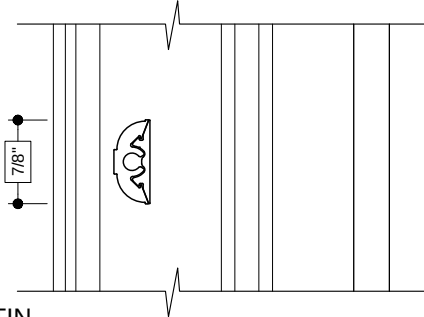


25
APPLIED MUNTIN
(TRAPEZOIDAL)

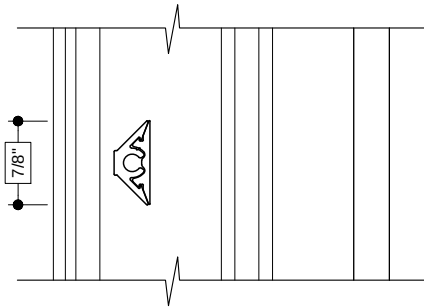 


26
SILL
(OUTSWING)

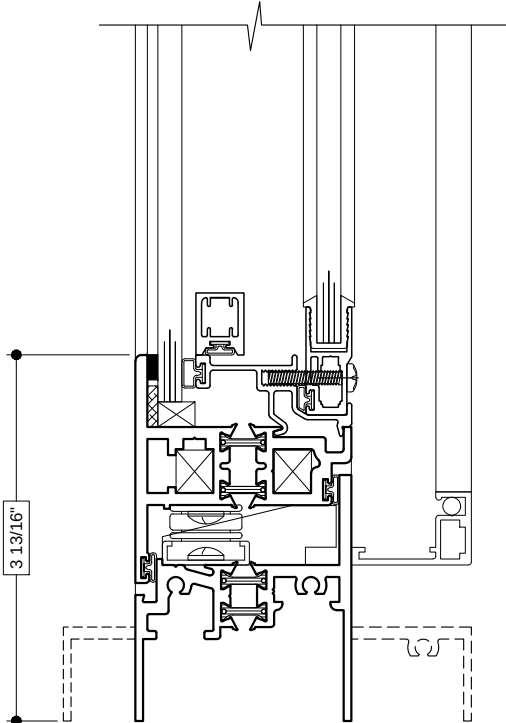 


27
HEAD
(FIXED PANEL)

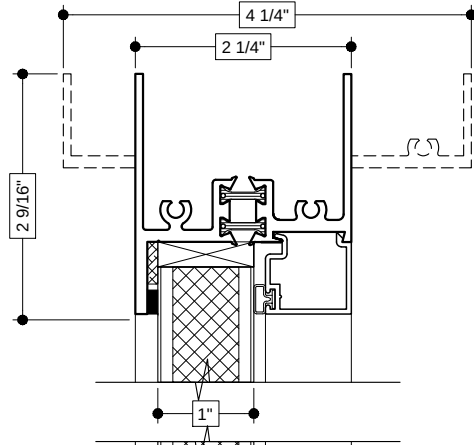 

 28
SELF-STACK
(FIXED PANEL OVER OUTSWING)

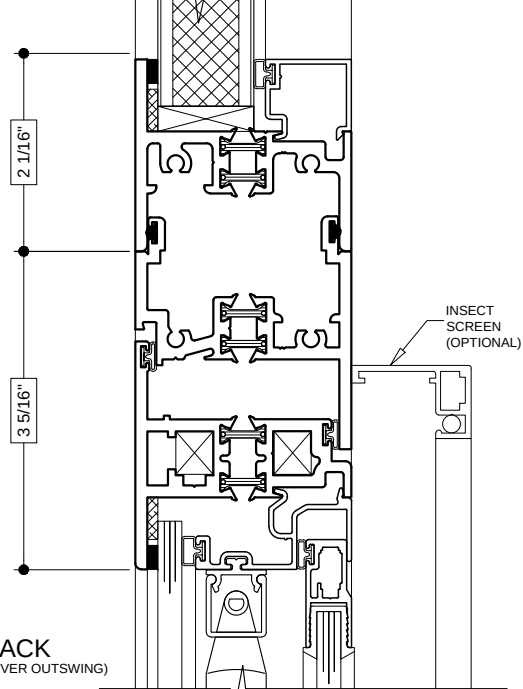


29
SILL
(OUTSWING)

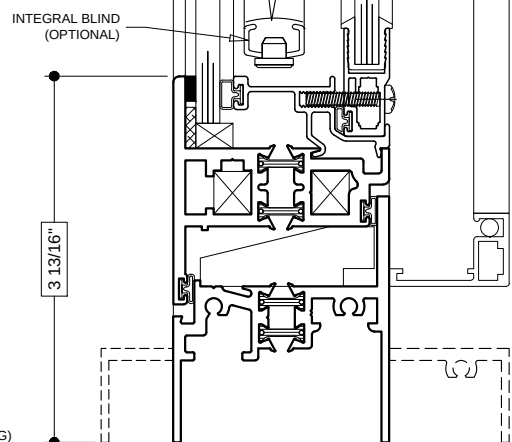 







Details shown reflect the most commonly used configurations.
Contact AWM for additional details and/or assistance.

 02/01/19

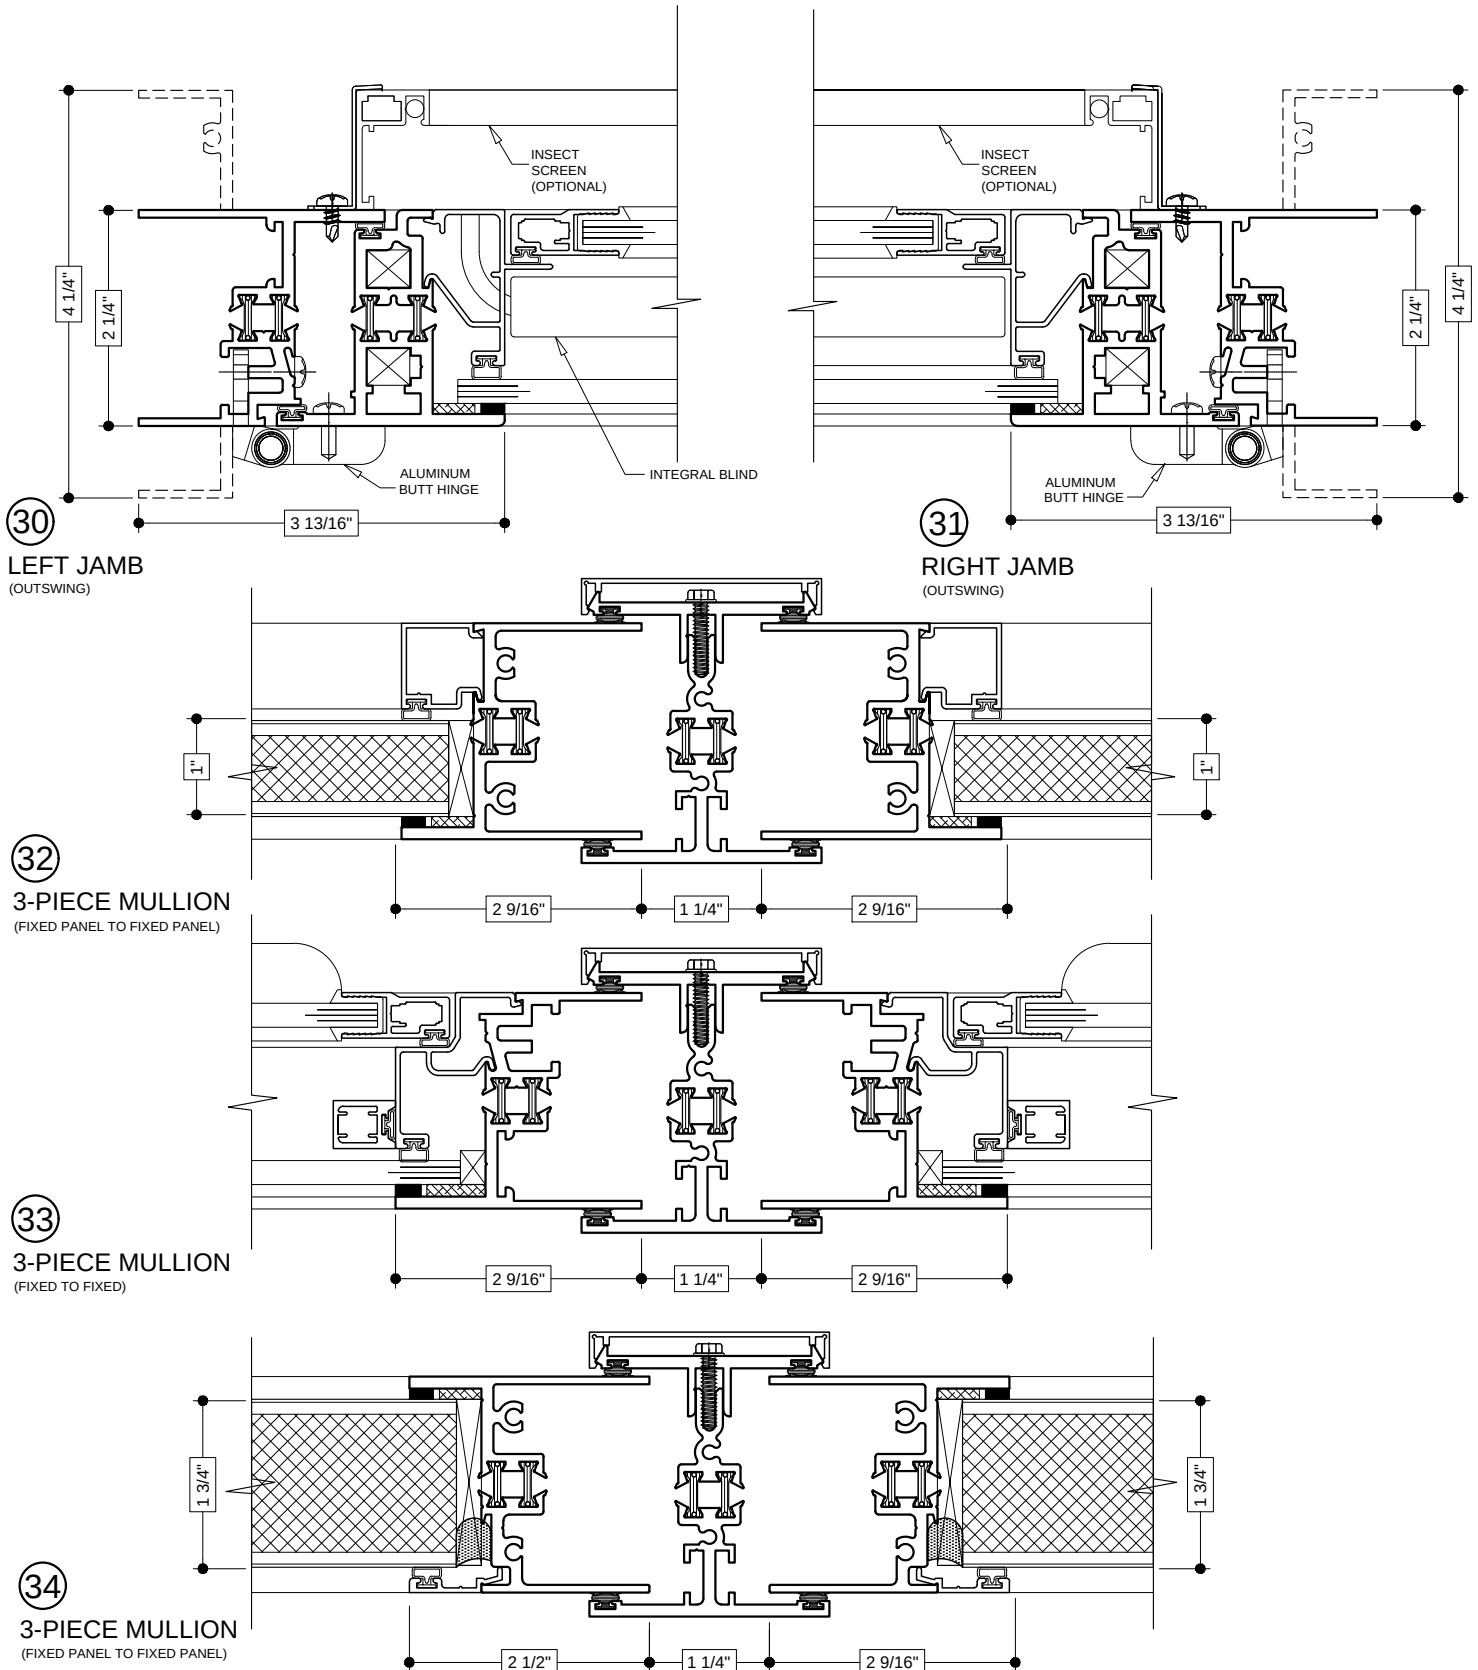

Details shown reflect the most commonly used configurations.
Contact AWM for additional details and/or assistance.

      
02/01/19

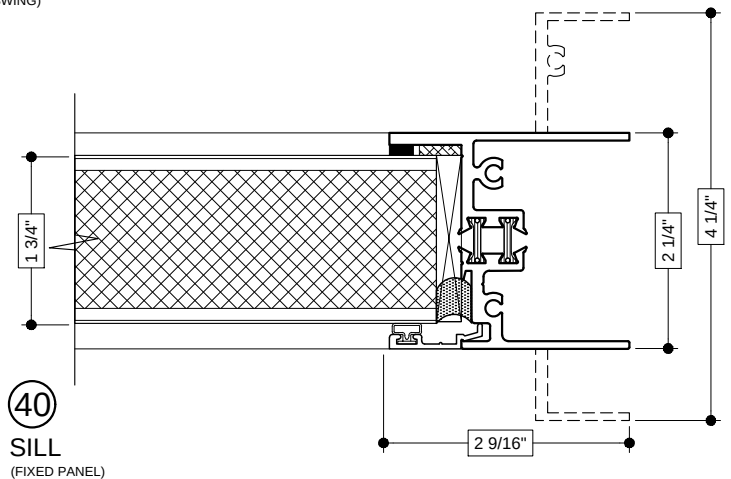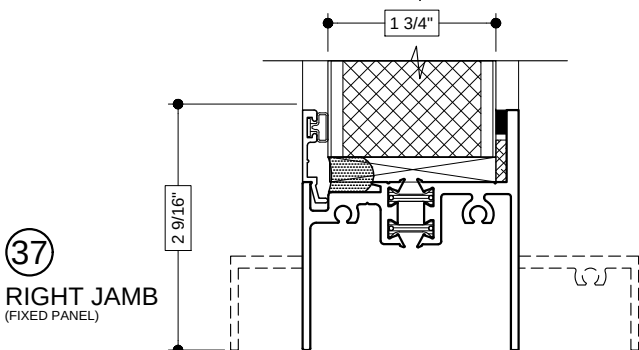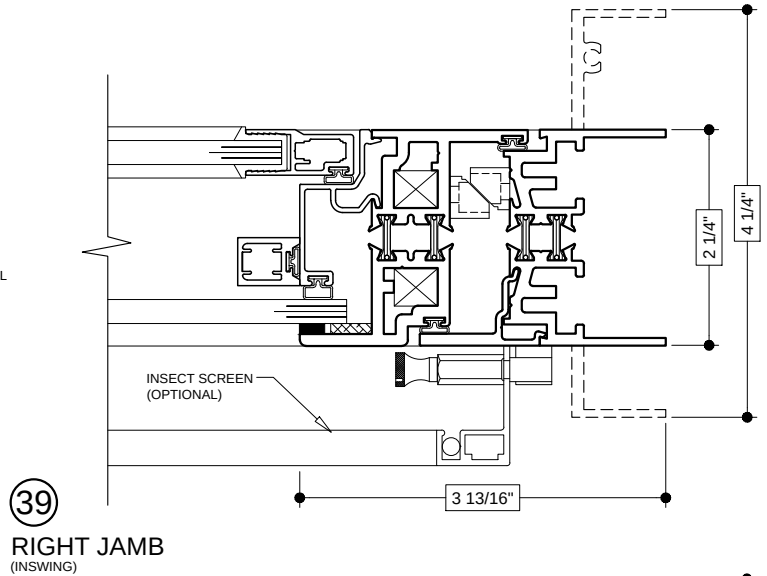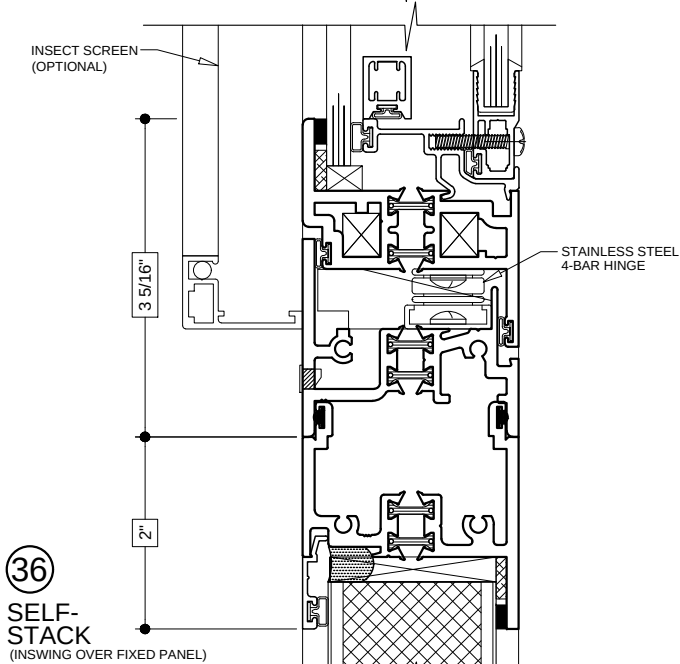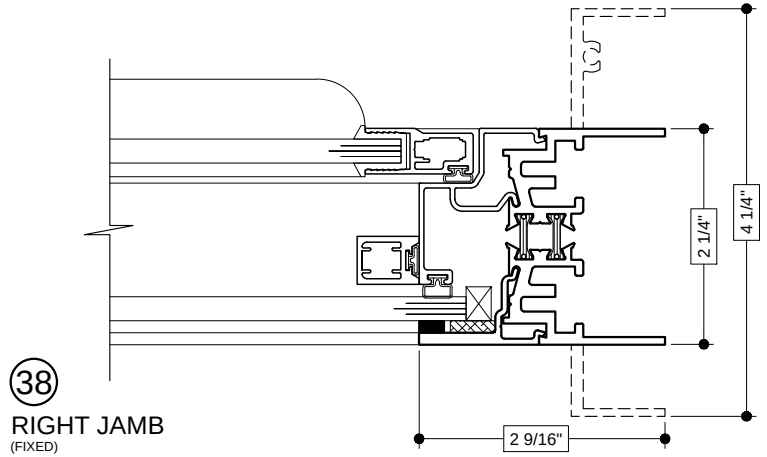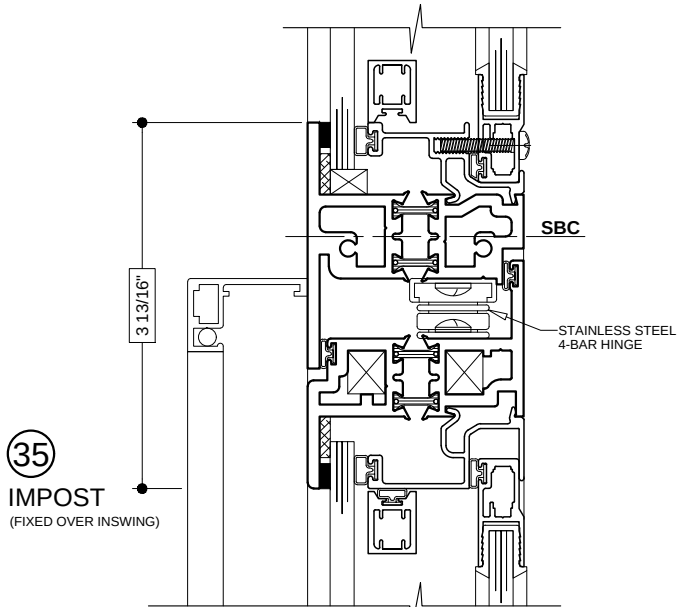


Details shown reflect the most commonly used configurations.
Contact AWM for additional details and/or assistance.

02/01/19

 
41
IMPOST
(FIXED)

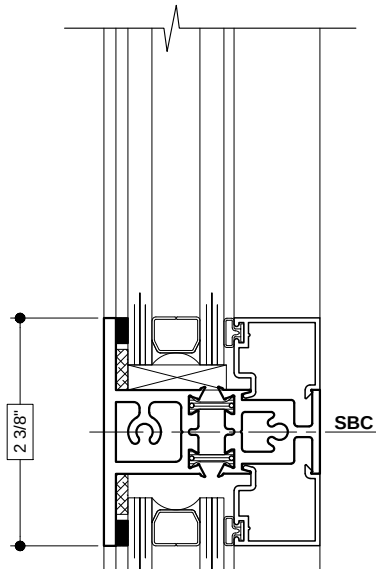


42
SILL
(FIXED)

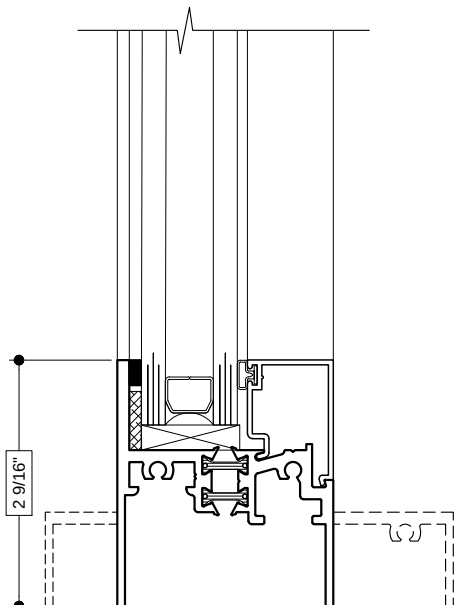 


43
SELF-MULLION
(FIXED-INSWING)

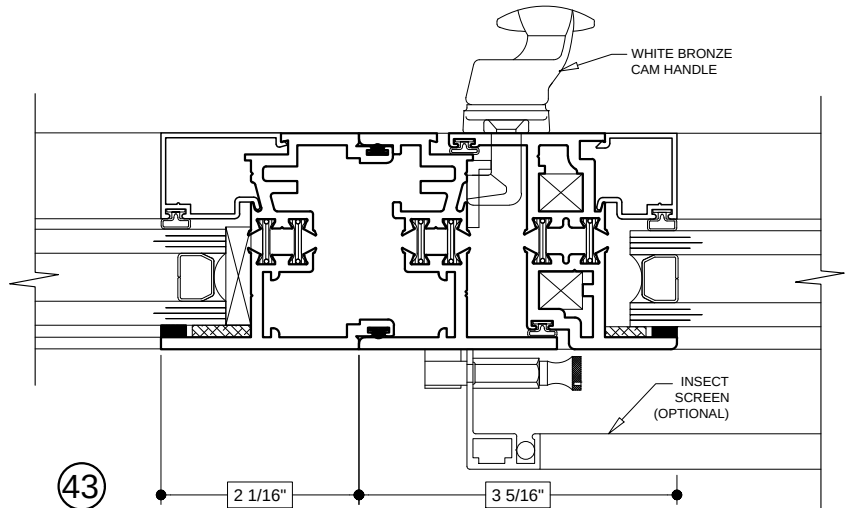 


44
SELF-MULLION
(INSWING-FIXED)

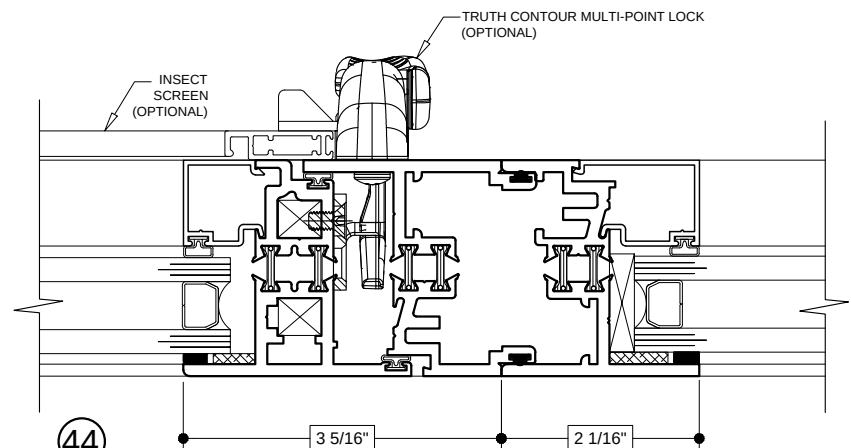 


45
IMPOST
(INSWING TO INSWING)

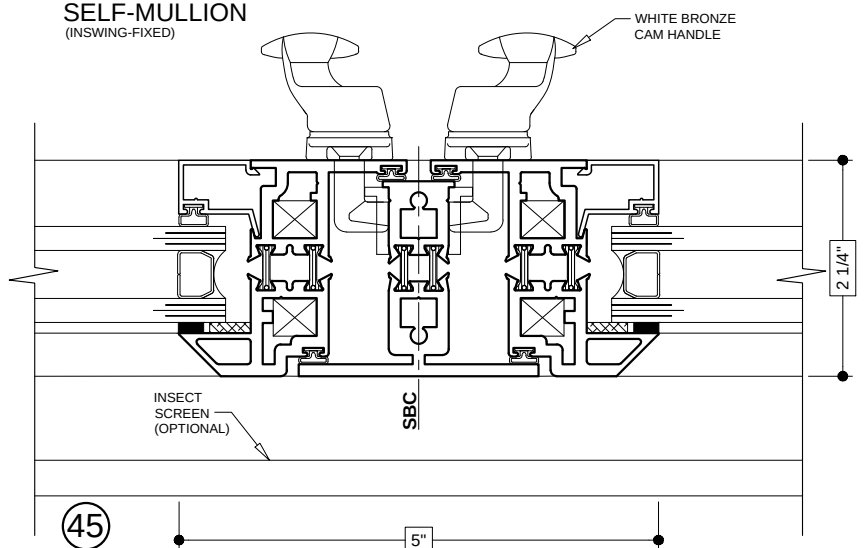 


46
HEAD
(FIXED)

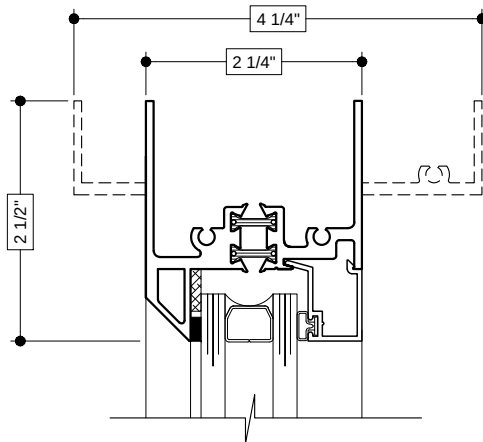 


49
APPLIED
MUNTIN
(TRAPEZOIDAL)

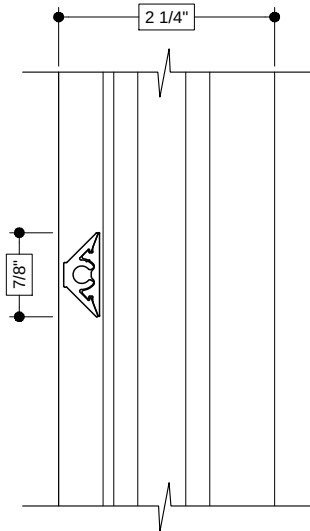 


47
SELF-STACK
(FIXED OVER OUTSWING)

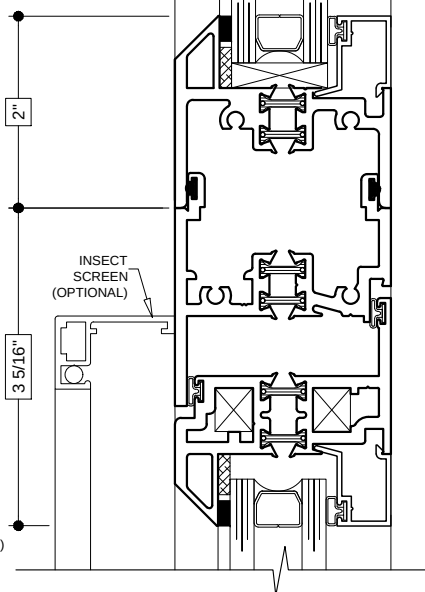 

50
RIGHT JAMB
(INSWING)

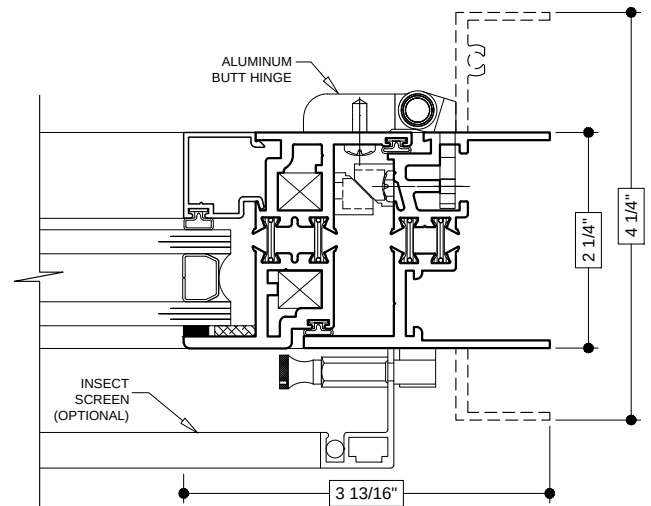 

48
SILL
(INSWING)

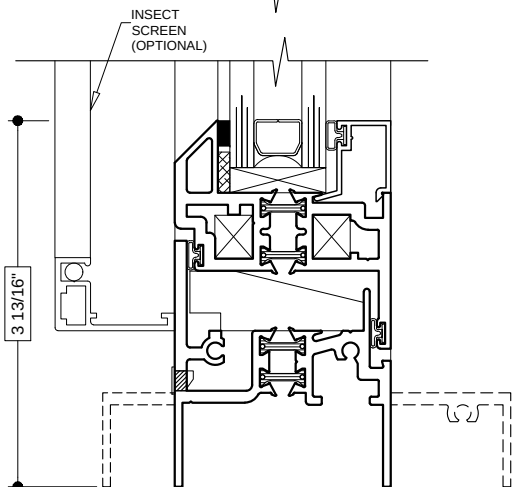 

Details shown reflect the most commonly used configurations.
Contact AWM for additional details and/or assistance.

02/01/19

OPTIONAL 2" EXTERIOR FLANGE

